
BOSE®

ACOUSTIC WAVE®

MUSIC SYSTEM

PEDESTAL

OWNER'S GUIDE

BOSE®

WARNING

To reduce the risk of fire or electric shock, do not expose this system to rain or moisture.

CAUTION

To reduce the risk of shock, do not remove the cover of this system. There are no user-serviceable parts inside. Refer servicing to qualified personnel.

The CAUTION marks shown on this page are located on the bottom of your system.



The lightning flash, with arrowhead symbol within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the system enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle as marked on the system is intended to alert the user to the presence of important operating and maintenance instructions in this owner's guide.

| | | |
|---|---|---|
|  | CAUTION RISK OF ELECTRICAL SHOCK DO NOT OPEN |  |
| CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED PERSONNEL. | | |

| |
|---|
| AVIS |
| RISQUE DE CHOC ÉLECTRIQUE- NE PAS OUVRIR |
| AFIN DE PRÉVENIR UN CHOC ÉLECTRIQUE NE PAS ENLEVER LE COUVERCLE ARRIÈRE. IL NE SE TROUVE À INTÉRIEUR AUCUNE PIÈCE POUVANT ÊTRE RÉPARÉE PAR L'USAGER. S'ADRESSER À UN RÉPARATEUR COMPÉTENT. |

CAUTION: For units with a polarized power plug, to prevent electric shock, match wide blade of plug to wide slot, insert fully.

ATTENTION : Pour éviter les chocs électriques, introduire la lame la plus large de la fiche dans la borne correspondante de la prise et pousser jusqu'au fond.

Safety instructions

Be sure to read these instructions first, before proceeding with the setup and connection of your Bose® Acoustic Wave® music system pedestal. Careful attention to safety will insure the carefree use and long lasting enjoyment of your new system.

- 1. Read Instructions** – Read all safety and operating instructions before the unit is operated.
- 2. Retain Instructions** – Retain the safety and operating instructions for future reference.
- 3. Heed Warnings** – Adhere to all warnings on the unit and in the operating instructions.
- 4. Follow Instructions** – Follow all operating and use instructions.
- 5. Water and Moisture** – Do not use the unit near water – for example, near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool and the like.
- 6. Ventilation** – Situate the unit so that its location or position does not interfere with its proper ventilation. For example, the unit should not be situated on a bed, sofa, rug, or similar surface that may block the ventilation.
- 7. Heat** – Situate the unit away from heat sources such as radiators, heat registers, stoves, or other appliances and direct sunlight.
- 8. Power Sources** – Connect the unit to a power supply only of the type described in the operating instructions or as marked on the unit.
- 9. Polarization** – The unit is equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug

fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.

10. Power Cord Protection – Route the power supply cord so that it is not likely to be walked on or pinched by items placed upon or against it, paying particular attention to the cord at the plug and the point where it exits from the unit.

11. Cleaning –

A: Unplug your Acoustic Wave® music system pedestal from the power supply before cleaning.

B: Wipe with a damp cloth and let dry.

C: Do not immerse in water.

D: Do not spray cleaners directly on the pedestal.

12. Object and liquid entry – Take care that objects do not fall into and liquids are not spilled into the inside of the unit.

13. Damage Requiring Service – The unit should be serviced by authorized personnel when:

A: The power supply cord or the plug has been damaged or,

B: Objects have fallen or liquids have spilled into the unit, or

C: The unit has been exposed to rain, or

D: The unit does not operate normally or exhibits a marked change in performance, or

E: The unit has been dropped or the cabinet damaged.

14. Servicing – Do not attempt to service the unit beyond those means described in the operating instructions. All other servicing should be referred to authorized service personnel.

CAUTION: THIS STAND IS DESIGNED FOR USE ONLY WITH THE BOSE ACOUSTIC WAVE® MUSIC SYSTEM. USE WITH OTHER APPLIANCES MAY RESULT IN INSTABILITY CAUSING POSSIBLE INJURY.

Bose Acoustic Wave® Music System Pedestal Owner's Guide

Thank you for purchasing the Acoustic Wave® music system pedestal, designed to complement the appearance and enhance your enjoyment of your music system. This new pedestal will enable you to easily use your music system with a variety of auxiliary sound equipment, such as a VCR or tape deck, without the inconvenience of switching power plugs and connectors.

The three easy steps below will help you set up your pedestal and complete all the connections. Then, whenever you want to change your listening preference, simply turn your music system on, press the appropriate panel selector switch on the front of the pedestal, and start your auxiliary player.

Setting Up Your Pedestal

1. Locate the pedestal within convenient reach of the power cords to your auxiliary equipment. Insert the output connector (Figure 1) from each separate component into the appropriate INPUT connector jack (marked CD, VCR, TAPE, or AUX) on the back of the pedestal. Now, plug the AC power cord from each auxiliary component into one of the four AC outlets on the pedestal back panel.

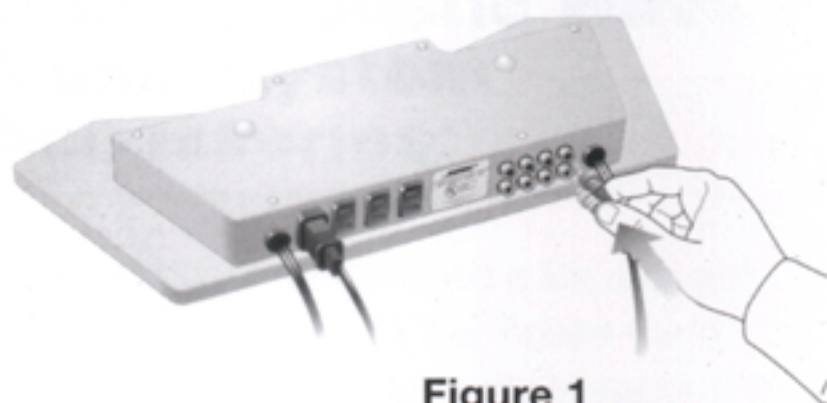


Figure 1

2. Place your music system on top of the pedestal (Figure 2), making sure to seat it firmly over the two pegs for added stability. Insert the OUTPUT connector from the pedestal into the AUX IN connector jack on the back of the Acoustic Wave® music system.

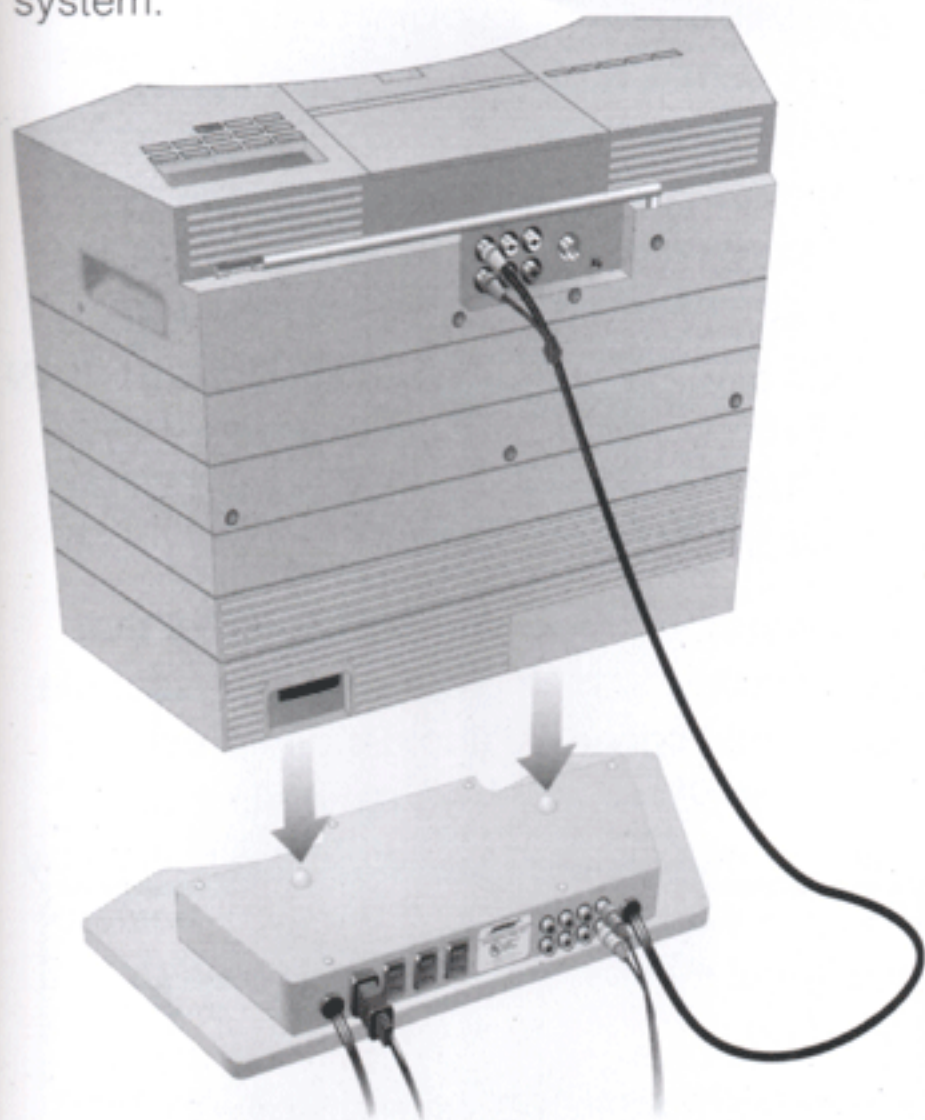


Figure 2

3. Plug the AC power cord from the Acoustic Wave® music system into any remaining AC outlet on the back of the pedestal or into a wall outlet, and plug the AC power cord from the pedestal into the wall outlet. Your installation is complete!

Using Your Acoustic Wave® Music System Pedestal

Enjoying a full range of musical components with your music system is as simple as 1-2-3.

1. Choose the component you want to listen to by pressing the appropriate button (CD, VCR, TAPE, or AUX) on the front panel of your pedestal (Figure 3).

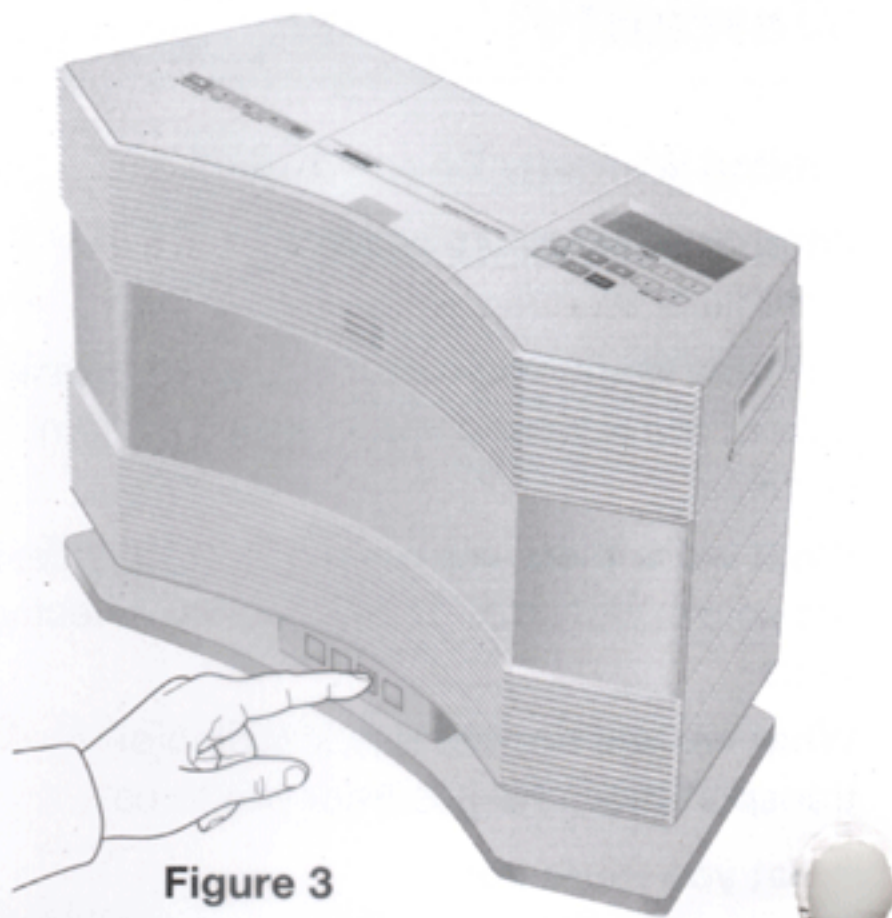


Figure 3

2. Press the AUX input button on your Acoustic Wave® music system to turn it on.
3. Turn on and begin playing your auxiliary music source.

In Case of Difficulty

If the unit does not function properly, even after following the steps outlined above:

- Make sure that the selector button you have pressed on the front of the pedestal is labeled the same (CD, VCR, TAPE, or AUX) as the back panel jack where the preferred component is connected.
- Check to make sure all AC power cords are firmly inserted into an AC outlet. The AC cords from each component and your music system may be inserted into either a wall outlet or one of the AC outlets on the rear panel of the pedestal. The pedestal power cord, however, must be plugged into a wall outlet, power strip, or extension cord only.

If, after completing the above checks, you continue to have a problem, please notify your Bose® sales representative. Bose Corporation will make every effort to remedy any problem within the terms of the warranty, and with minimum inconvenience to you.

Warranty

Limited Warranty Bose® Product

What is covered: All parts defective in material or workmanship.

For how long: One year from the purchase date of the Acoustic Wave® music system pedestal.

What we will do: We will repair or replace, at our sole option, free of charge, any defective parts.

What we will not do: Pay shipping or transportation charges from you to us.

What you must do:

1. Return product personally with original proof of purchase from an authorized Bose dealer to your authorized Bose dealer, or
2. Return product personally with original proof of purchase from an authorized Bose dealer to the nearest authorized Bose Service Agency, or
3. Return product personally with original proof of purchase from an authorized Bose dealer directly to the Bose factory. If you elect to return the product directly to the Bose factory,
 - a. Call the Bose Service Department at 800-637-8781 or 508-879-7330, x.62005, and ask to be assigned a *return authorization number* and shipping instructions.
 - b. Properly pack the product in the original carton for shipping. If you need a new carton, contact Bose Corporation for one, available at nominal charge.
 - c. Label and ship, freight prepaid, to the address provided by the Bose Service Department, and
 - d. Place your return authorization number prominently on the outside of the carton. (Cartons not bearing a return authorization number will be refused.)

Other conditions: This warranty is fully transferable provided the current owner furnishes the original proof of purchase from an authorized Bose dealer.

THE PROVISIONS OF THIS WARRANTY ARE IN LIEU OF ANY OTHER WRITTEN WARRANTY, WHETHER EXPRESSED OR IMPLIED, WRITTEN OR ORAL, INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. THE MAXIMUM LIABILITY OF BOSE SHALL NOT EXCEED THE ACTUAL PURCHASE PRICE PAID BY YOU FOR THE PRODUCT. IN NO EVENT SHALL BOSE BE LIABLE FOR SPECIAL, INCIDENTAL, CONSEQUENTIAL, OR INDIRECT DAMAGES.

This warranty does not cover a defect that has resulted from improper or unreasonable use or maintenance, accident, improper packing, or unauthorized tampering, alteration or modification as determined solely by us. This warranty is void if the label bearing the serial number has been removed or defaced.

Other law rights: This warranty gives you specific legal rights, and you may also have other rights which vary from state to state or country to country. Some places do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

Other Acoustic Wave® Music System Accessories

Other accessories available for use with your music system include the Power Cord (DC adapter), Power Pack (rechargeable battery), Power Case and Power Microphone. Contact your Bose sales representative for more information.

BOSE[®]
Better sound through research[®]

© 1997 Bose Corporation
The Mountain, Framingham, MA 01701-9168
JN98817 PN142151 Rev.03 AM142151 Rev.03