

Home Theater Systems	Power State Information	Power Modes	
		Standby	Networked Standby
<p>SoundTouch™ AM3 Wi-Fi speaker system</p> <p>SoundTouch™ 151SE outdoor speaker system</p> <p>SoundTouch™ 251 outdoor speaker system</p> <p>SoundTouch™ SA-4 amplifier</p>	<p>Power consumption in specified power mode, at 230V/50Hz input</p> <p>Time after which equipment is automatically switched into mode</p> <p>Power consumption in networked standby with all wired network ports connected and all wireless network ports activated, at 230V/50Hz input</p> <p>Wireless port deactivation/activation procedures</p>	<p>0.3 W</p> <p>< 20 minutes</p> <p>4.3 W</p>	<p>Wi-Fi: 4.9 W Ethernet: 4.3 W</p> <p>< 20 minutes</p> <p>Wi-Fi: To disable Wi-Fi capability, press and hold the adapter's Control button (8-10 seconds). When the Wi-Fi indicator turns off, release the Control button. To re-enable Wi-Fi capability, press the adapter's Control button.</p>
<p>VideoWave® III Entertainment System</p>	<p>Power consumption in specified power mode, at 230V/50Hz input</p> <p>Time after which equipment is automatically switched into mode</p> <p>Power consumption in networked standby with all wired network ports connected and all wireless network ports activated, at 230V/50Hz input</p> <p>Wireless port deactivation/activation procedures</p>	<p>0.49 W</p> <p>< 20 minutes</p> <p>4.4 W</p>	<p>Wi-Fi: 5.0 W Ethernet: 4.4 W</p> <p>< 20 minutes</p> <p>Wi-Fi: To disable Wi-Fi capability, press and hold the adapter's Control button (8-10 seconds). When the Wi-Fi indicator turns off, release the Control button. To re-enable Wi-Fi capability, press the adapter's Control button.</p>
<p>Lifestyle® 135 series III home entertainment system</p> <p>Lifestyle® 235 series III home entertainment system</p> <p>Lifestyle® 535 series III home entertainment system</p> <p>Lifestyle® 525 series III home entertainment system</p>	<p>Power consumption in specified power mode, at 230V/50Hz input</p> <p>Time after which equipment is automatically switched into mode</p> <p>Power consumption in networked standby with all wired network ports connected and all wireless network ports activated, at 230V/50Hz input</p> <p>Wireless port deactivation/activation procedures</p>	<p>0.47 W</p> <p>< 30 minutes</p> <p>4.2 W</p>	<p>Wi-Fi: 4.8 W Ethernet: 4.2 W</p> <p>< 20 minutes</p> <p>Wi-Fi: To disable Wi-Fi capability, press and hold the adapter's Control button (8-10 seconds). When the Wi-Fi indicator turns off, release the Control button. To re-enable Wi-Fi capability, press the adapter's Control button.</p>
<p>SoundTouch™ Stereo JC series II Wi-Fi® music system</p>	<p>Power consumption in specified power mode, at 230V/50Hz input</p> <p>Time after which equipment is automatically switched into mode</p> <p>Power consumption in networked standby with all wired network ports connected and all wireless network ports activated, at 230V/50Hz input</p> <p>Wireless port deactivation/activation procedures</p>	<p>0.47 W</p> <p>< 20 minutes</p> <p>4.4 W</p>	<p>Wi-Fi: 5.0 W Ethernet: 4.4 W</p> <p>< 20 minutes</p> <p>Wi-Fi: To disable Wi-Fi capability, press and hold the adapter's Control button (8-10 seconds). When the Wi-Fi indicator turns off, release the Control button. To re-enable Wi-Fi capability, press the adapter's Control button.</p>

Wave Music Systems	Power State Information	Power Modes	
		Standby	Networked Standby
<p>Wave® SoundTouch™ music system</p>	<p>Power consumption in specified power mode, at 230V/50Hz input</p> <p>Time after which equipment is automatically switched into mode</p> <p>Power consumption in networked standby with all wired network ports connected and all wireless network ports activated, at 230V/50Hz input</p> <p>Wireless port deactivation/activation procedures</p>	<p>0.9 W</p> <p>< 20 minutes</p> <p>5.3 W</p>	<p>Wi-Fi: 5.9 W Ethernet: 5.3 W</p> <p>< 20 minutes</p> <p>Wi-Fi: To disable Wi-Fi, press and hold the Control button on the back of the SoundTouch™ pedestal for at least eight seconds or until the Wi-Fi status indicator turns off. To enable Wi-Fi again, turn on the system, or quickly press and release the Control button.</p>

Multimedia Sound	Power State Information	Power Modes	
		Standby	Networked Standby
SoundLink® Bluetooth® speaker III	<p>Power consumption in specified power mode, at 230V/50Hz input</p> <p>Time after which equipment is automatically switched into mode</p> <p>Power consumption in networked standby with all wired network ports connected and all wireless network ports activated, at 230V/50Hz input</p> <p>Wireless port deactivation/activation procedures</p>	<p>0.4 W</p> <p>30 minutes</p> <p>N/A</p>	<p>N/A</p> <p>N/A</p> <p>Bluetooth: Deactivate by resetting the speaker by pressing and holding the Mute button on the unit (about 10 seconds). Activate by pairing with a Bluetooth source.</p>
SoundLink® Mini Bluetooth® speaker	<p>Power consumption in specified power mode, at 230V/50Hz input</p> <p>Time after which equipment is automatically switched into mode</p> <p>Power consumption in networked standby with all wired network ports connected and all wireless network ports activated, at 230V/50Hz input</p> <p>Wireless port deactivation/activation procedures</p>	<p>0.4 W</p> <p>30 minutes</p> <p>N/A</p>	<p>N/A</p> <p>N/A</p> <p>Bluetooth: Deactivate by clearing the pairing list by pressing and holding the Bluetooth button on the unit (about 10 seconds). Activate by pairing with a Bluetooth source.</p>
SoundLink® Color/Colour Bluetooth® speaker	<p>Power consumption in specified power mode, at 230V/50Hz input</p> <p>Time after which equipment is automatically switched into mode</p> <p>Power consumption in networked standby with all wired network ports connected and all wireless network ports activated, at 230V/50Hz input</p> <p>Wireless port deactivation/activation procedures</p>	<p>0.08 W</p> <p>30 minutes</p> <p>N/A</p>	<p>N/A</p> <p>N/A</p> <p>Bluetooth: Deactivate by clearing the pairing list by pressing and holding the Bluetooth button on the unit (about 10 seconds). Activate by pairing with a Bluetooth source.</p>
SoundTouch™ Portable series II Wi-Fi® music system	<p>Power consumption in specified power mode, at 230V/50Hz input</p> <p>Time after which equipment is automatically switched into mode</p> <p>Power consumption in networked standby with all wired network ports connected and all wireless network ports activated, at 230V/50Hz input</p> <p>Wireless port deactivation/activation procedures</p>	<p>0.48 W</p> <p>< 20 minutes</p> <p>4.9 W</p>	<p>Wi-Fi: 4.9 W</p> <p>< 20 minutes</p> <p>Wi-Fi: To disable Wi-Fi, press and hold "3" and volume down (about 5 seconds) on the button pad until the Wi-Fi indicator turns off. To reactivate Wi-Fi, press and hold "3" and volume down (about 5 seconds) until the Wi-Fi indicator is illuminated.</p>
SoundTouch™ 20 series II Wi-Fi® music system	<p>Power consumption in specified power mode, at 230V/50Hz input</p> <p>Time after which equipment is automatically switched into mode</p> <p>Power consumption in networked standby with all wired network ports connected and all wireless network ports activated, at 230V/50Hz input</p> <p>Wireless port deactivation/activation procedures</p>	<p>0.4 W</p> <p>< 20 minutes</p> <p>4.3 W</p>	<p>Wi-Fi: 4.9 W Ethernet: 4.3 W</p> <p>< 20 minutes</p> <p>Wi-Fi: To disable Wi-Fi, press and hold "3" and volume down (about 5 seconds) on the button pad until the Wi-Fi indicator turns off. To reactivate Wi-Fi, press and hold "3" and volume down (about 5 seconds) until the Wi-Fi indicator is illuminated.</p>
SoundTouch™ 30 series II Wi-Fi® music system	<p>Power consumption in specified power mode, at 230V/50Hz input</p> <p>Time after which equipment is automatically switched into mode</p> <p>Power consumption in networked standby with all wired network ports connected and all wireless network ports activated, at 230V/50Hz input</p> <p>Wireless port deactivation/activation procedures</p>	<p>0.4 W</p> <p>< 20 minutes</p> <p>4.3 W</p>	<p>Wi-Fi: 5.0 W Ethernet: 4.3 W</p> <p>< 20 minutes</p> <p>Wi-Fi: To disable Wi-Fi, press and hold "3" and volume down (about 5 seconds) on the button pad until the Wi-Fi indicator turns off. To reactivate Wi-Fi, press and hold "3" and volume down (about 5 seconds) until the Wi-Fi indicator is illuminated.</p>

Accessories	Power State Information	Power Modes	
		Standby	Networked Standby
Bluetooth® audio adapter	Power consumption in specified power mode, at 230V/50Hz input	0.3 W	N/A
	Time after which equipment is automatically switched into mode	N/A	N/A
	Power consumption in networked standby with all wired network ports connected and all wireless network ports activated, at 230V/50Hz input	N/A	
	Wireless port deactivation/activation procedures	Bluetooth: Deactivate by clearing the pairing list by pressing and holding the Bluetooth button on the adapter (about 10 seconds). Activate by pairing with a Bluetooth source.	