

Home Theater Systems	Power State Information	Power Modes	
		Standby	Networked Standby
SoundTouch® SA-5 amplifier	<p>Power consumption in specified power mode, at 230V/50Hz input</p> <p>Time after which equipment is automatically switched into mode</p> <p>Power consumption in networked standby with all wired network ports connected and all wireless network ports activated, at 230V/50Hz input</p> <p>Wireless port deactivation/activation procedures</p>	<p>0.3 W</p> <p>≤ 2.5 hr</p> <p>2.0 W</p>	<p>Wi-Fi: 2.0 W Ethernet: 1.9 W Bluetooth®: N/A</p> <p>≤ 20 minutes</p> <p>Wi-Fi and Bluetooth®: To disable network capability, press and hold the unit's Control button. When the Wi-Fi indicator turns off, release the Control button. Within 2.5 hours the unit will enter low power standby. To re-enable network capability, press the unit's Control button.</p>
<p>SoundTouch™ AM3 Wi-Fi speaker system</p> <p>SoundTouch™ AM3 Series II Wi-Fi speaker system</p> <p>SoundTouch™ 151SE outdoor speaker system</p> <p>SoundTouch™ 251 outdoor speaker system</p> <p>SoundTouch™ SA-4 amplifier</p>	<p>Power consumption in specified power mode, at 230V/50Hz input</p> <p>Time after which equipment is automatically switched into mode</p> <p>Power consumption in networked standby with all wired network ports connected and all wireless network ports activated, at 230V/50Hz input</p> <p>Wireless port deactivation/activation procedures</p>	<p>0.3 W</p> <p>≤ 2.5 hr</p> <p>4.3 W</p>	<p>Wi-Fi: 4.9 W Ethernet: 4.3 W</p> <p>≤ 20 minutes</p> <p>Wi-Fi: To disable Wi-Fi capability, press and hold the adapter's Control button. When the Wi-Fi indicator turns off, release the Control button. Within 2.5 hours the unit will enter low power standby. To re-enable Wi-Fi capability, press the adapter's Control button.</p>
VideoWave® III Entertainment System	<p>Power consumption in specified power mode, at 230V/50Hz input</p> <p>Time after which equipment is automatically switched into mode</p> <p>Power consumption in networked standby with all wired network ports connected and all wireless network ports activated, at 230V/50Hz input</p> <p>Wireless port deactivation/activation procedures</p>	<p>0.49 W</p> <p>≤ 2.5 hr</p> <p>4.4 W</p>	<p>Wi-Fi: 5.0 W Ethernet: 4.4 W</p> <p>≤ 20 minutes</p> <p>Wi-Fi: To disable Wi-Fi capability, press and hold the adapter's Control button. When the Wi-Fi indicator turns off, release the Control button. Within 2.5 hours the unit will enter low power standby. To re-enable Wi-Fi capability, press the adapter's Control button.</p>
<p>Lifestyle® SoundTouch® 135 entertainment system</p> <p>Lifestyle® SoundTouch® 235 entertainment system</p> <p>Lifestyle® SoundTouch® 525 entertainment system</p> <p>Lifestyle® SoundTouch® 535 entertainment system</p>	<p>Power consumption in specified power mode, at 230V/50Hz input</p> <p>Time after which equipment is automatically switched into mode</p> <p>Power consumption in networked standby with all wired network ports connected and all wireless network ports activated, at 230V/50Hz input</p> <p>Wireless port deactivation/activation procedures</p>	<p>0.46 W</p> <p>≤ 2.5 hr</p> <p>2.5 W</p>	<p>Wi-Fi: 2.5 W Ethernet: 2.4 W Bluetooth®: N/A</p> <p>≤ 20 minutes</p> <p>Wi-Fi and Bluetooth®: To disable network capability, press and hold the adapter's Control button. When the Wi-Fi indicator turns off, release the Control button. Within 2.5 hours the unit will enter low power standby. To re-enable network capability, press the adapter's Control button.</p>
<p>Lifestyle® 135 series III home entertainment system</p> <p>Lifestyle® 235 series III home entertainment system</p> <p>Lifestyle® 525 series III home entertainment system</p> <p>Lifestyle® 535 series III home entertainment system</p>	<p>Power consumption in specified power mode, at 230V/50Hz input</p> <p>Time after which equipment is automatically switched into mode</p> <p>Power consumption in networked standby with all wired network ports connected and all wireless network ports activated, at 230V/50Hz input</p> <p>Wireless port deactivation/activation procedures</p>	<p>0.47 W</p> <p>≤ 2.5 hr</p> <p>4.2 W</p>	<p>Wi-Fi: 4.8 W Ethernet: 4.2 W</p> <p>≤ 20 minutes</p> <p>Wi-Fi: To disable Wi-Fi capability, press and hold the adapter's Control button. When the Wi-Fi indicator turns off, release the Control button. Within 2.5 hours the unit will enter low power standby. To re-enable Wi-Fi capability, press the adapter's Control button.</p>
<p>SoundTouch® 120 home cinema system</p> <p>SoundTouch® 220 home cinema system</p> <p>SoundTouch® 520 home cinema system</p> <p>SoundTouch® 130 home cinema system</p>	<p>Power consumption in specified power mode, at 230V/50Hz input</p> <p>Time after which equipment is automatically switched into mode</p> <p>Power consumption in networked standby with all wired network ports connected and all wireless network ports activated, at 230V/50Hz input</p> <p>Wireless port deactivation/activation procedures</p>	<p>0.41 W</p> <p>≤ 2.5 hr</p> <p>4.9 W</p>	<p>Wi-Fi: 4.9 W Ethernet: 4.9 W Bluetooth®: N/A</p> <p>≤ 20 minutes</p> <p>Wi-Fi and Bluetooth®: To disable network capability, press and hold the adapter's Control button. When the Wi-Fi indicator turns off, release the Control button. Within 2.5 hours the unit will enter low power standby. To re-enable network capability, press the adapter's Control button.</p>

Solo 5 TV sound system	Power consumption in specified power mode, at 230V/50Hz input	0.2 W	N/A
	Time after which equipment is automatically switched into mode	≤ 1 hr	N/A
	Power consumption in networked standby with all wired network ports connected and all wireless network ports activated, at 230V/50Hz input	N/A	
	Wireless port deactivation/activation procedures	Bluetooth®: Deactivate by clearing the pairing list by pressing and holding the Bluetooth® button on the remote until the Bluetooth® indicator blinks blue. Activate by pairing with a Bluetooth® source.	
Solo 15 II TV sound system	Power consumption in specified power mode, at 230V/50Hz input	0.48 W	N/A
	Time after which equipment is automatically switched into mode	≤ 1 hr	N/A
	Power consumption in networked standby with all wired network ports connected and all wireless network ports activated, at 230V/50Hz input	N/A	
	Wireless port deactivation/activation procedures	Bluetooth®: Deactivate by clearing the pairing list by pressing and holding the Bluetooth® button on the remote until the Bluetooth® indicator blinks blue. Activate by pairing with a Bluetooth® source.	
SoundTouch™ Stereo JC series II Wi-Fi® music system	Power consumption in specified power mode, at 230V/50Hz input	0.47 W	Wi-Fi: 5.0 W Ethernet: 4.4 W
	Time after which equipment is automatically switched into mode	≤ 2.5 hr	≤ 20 minutes
	Power consumption in networked standby with all wired network ports connected and all wireless network ports activated, at 230V/50Hz input	4.4 W	
	Wireless port deactivation/activation procedures	Wi-Fi: To disable Wi-Fi capability, press and hold the adapter's Control button. When the Wi-Fi indicator turns off, release the Control button. Within 2.5 hours the unit will enter low power standby. To re-enable Wi-Fi capability, press the adapter's Control button.	

Wave Music Systems	Power State Information	Power Modes	
		Standby	Networked Standby
Wave® SoundTouch® music system IV	Power consumption in specified power mode, at 230V/50Hz input	0.97 W	Wi-Fi: 3.7 W Ethernet: 3.7 W Bluetooth®: N/A
	Time after which equipment is automatically switched into mode	≤ 2.5 hr	≤ 20 minutes
	Power consumption in networked standby with all wired network ports connected and all wireless network ports activated, at 230V/50Hz input	3.7 W	
	Wireless port deactivation/activation procedures	Wi-Fi and Bluetooth®: To disable network capability, press and hold the Control button on the back of the SoundTouch™ pedestal until the Wi-Fi status indicator turns off. Within 2.5 hours the unit will enter low power standby. To re-enable network capability, turn on the system, or quickly press and release the Control button.	
Wave® SoundTouch™ music system	Power consumption in specified power mode, at 230V/50Hz input	0.9 W	Wi-Fi: 5.9 W Ethernet: 5.3 W
	Time after which equipment is automatically switched into mode	≤ 2.5 hr	≤ 20 minutes
	Power consumption in networked standby with all wired network ports connected and all wireless network ports activated, at 230V/50Hz input	5.3 W	
	Wireless port deactivation/activation procedures	Wi-Fi: To disable Wi-Fi, press and hold the Control button on the back of the SoundTouch™ pedestal until the Wi-Fi status indicator turns off. Within 2.5 hours the unit will enter low power standby. To enable Wi-Fi again, turn on the system, or quickly press and release the Control button.	

Multimedia Sound	Power State Information	Power Modes	
		Standby	Networked Standby
SoundLink® Bluetooth® speaker III	<p>Power consumption in specified power mode, at 230V/50Hz input</p> <p>Time after which equipment is automatically switched into mode</p> <p>Power consumption in networked standby with all wired network ports connected and all wireless network ports activated, at 230V/50Hz input</p> <p>Wireless port deactivation/activation procedures</p>	<p>0.4 W</p> <p>≤ 30 minutes</p> <p>N/A</p> <p>Bluetooth®: Deactivate by resetting the speaker by pressing and holding the Mute button on the unit (about 10 seconds). Activate by pairing with a Bluetooth® source.</p>	<p>N/A</p> <p>N/A</p>
SoundLink® Mini Bluetooth® speaker II	<p>Power consumption in specified power mode, at 230V/50Hz input</p> <p>Time after which equipment is automatically switched into mode</p> <p>Power consumption in networked standby with all wired network ports connected and all wireless network ports activated, at 230V/50Hz input</p> <p>Wireless port deactivation/activation procedures</p>	<p>0.1 W</p> <p>≤ 30 minutes</p> <p>0.5 W</p> <p>Bluetooth®: Deactivate by clearing the pairing list by pressing and holding the Bluetooth® button on the unit (about 10 seconds). Activate by pairing with a Bluetooth® source.</p>	<p>Bluetooth®: 0.5W</p> <p>≤ 5 minutes</p>
SoundLink® Mini Bluetooth® speaker	<p>Power consumption in specified power mode, at 230V/50Hz input</p> <p>Time after which equipment is automatically switched into mode</p> <p>Power consumption in networked standby with all wired network ports connected and all wireless network ports activated, at 230V/50Hz input</p> <p>Wireless port deactivation/activation procedures</p>	<p>0.4 W</p> <p>≤ 30 minutes</p> <p>N/A</p> <p>Bluetooth®: Deactivate by clearing the pairing list by pressing and holding the Bluetooth® button on the unit (about 10 seconds). Activate by pairing with a Bluetooth® source.</p>	<p>N/A</p> <p>N/A</p>
SoundLink® Color/Colour Bluetooth® speaker	<p>Power consumption in specified power mode, at 230V/50Hz input</p> <p>Time after which equipment is automatically switched into mode</p> <p>Power consumption in networked standby with all wired network ports connected and all wireless network ports activated, at 230V/50Hz input</p> <p>Wireless port deactivation/activation procedures</p>	<p>0.1 W</p> <p>≤ 30 minutes</p> <p>N/A</p> <p>Bluetooth®: Deactivate by clearing the pairing list by pressing and holding the Bluetooth® button on the unit (about 10 seconds). Activate by pairing with a Bluetooth® source.</p>	<p>N/A</p> <p>N/A</p>
SoundTouch™ Portable series II Wi-Fi® music system	<p>Power consumption in specified power mode, at 230V/50Hz input</p> <p>Time after which equipment is automatically switched into mode</p> <p>Power consumption in networked standby with all wired network ports connected and all wireless network ports activated, at 230V/50Hz input</p> <p>Wireless port deactivation/activation procedures</p>	<p>0.48 W</p> <p>≤ 20 minutes</p> <p>4.9 W</p> <p>Wi-Fi: To disable Wi-Fi, press and hold "3" and volume down on the button pad until the Wi-Fi indicator turns off. To reactivate Wi-Fi, press and hold "3" and volume down until the Wi-Fi indicator is illuminated.</p>	<p>Wi-Fi: 4.9 W</p> <p>≤ 20 minutes</p>
SoundTouch® 10 wireless music system	<p>Power consumption in specified power mode, at 230V/50Hz input</p> <p>Time after which equipment is automatically switched into mode</p> <p>Power consumption in networked standby with all wired network ports connected and all wireless network ports activated, at 230V/50Hz input</p> <p>Wireless port deactivation/activation procedures</p>	<p>0.4 W</p> <p>≤ 2.5 hr</p> <p>2.0 W</p> <p>Wi-Fi: To disable Wi-Fi, press and hold "3" and volume down on the button pad until the Wi-Fi indicator turns off. Within 2.5 hours the unit will enter low power standby. To reactivate Wi-Fi, press and hold "3" and volume down until the Wi-Fi indicator is illuminated.</p> <p>Bluetooth®: Deactivate by clearing the pairing list by pressing and holding the Bluetooth® button on the unit until the Bluetooth® indicator blinks white. Activate by pairing with a Bluetooth® source.</p>	<p>Wi-Fi: 2.0 W Bluetooth®: N/A</p> <p>≤ 20 minutes</p>

SoundTouch® 20 Series III wireless music system	Power consumption in specified power mode, at 230V/50Hz input	0.4 W	Wi-Fi: 2.2 W Ethernet: 2.0 W Bluetooth®: N/A
	Time after which equipment is automatically switched into mode	≤ 2.5 hr	≤ 20 minutes
	Power consumption in networked standby with all wired network ports connected and all wireless network ports activated, at 230V/50Hz input	2.2 W	
	Wireless port deactivation/activation procedures	Wi-Fi: To disable Wi-Fi, press and hold "3" and volume down on the button pad until the Wi-Fi indicator turns off. Within 2.5 hours the unit will enter low power standby. To reactivate Wi-Fi, press and hold "3" and volume down until the Wi-Fi indicator is illuminated. Bluetooth®: Deactivate by clearing the pairing list by pressing and holding the Bluetooth® button on the unit until a confirmation message appears on the display. Activate by pairing with a Bluetooth® source.	
SoundTouch™ 20 series II Wi-Fi® music system	Power consumption in specified power mode, at 230V/50Hz input	0.4 W	Wi-Fi: 4.9 W Ethernet: 4.3 W
	Time after which equipment is automatically switched into mode	≤ 2.5 hr	≤ 20 minutes
	Power consumption in networked standby with all wired network ports connected and all wireless network ports activated, at 230V/50Hz input	4.3 W	
	Wireless port deactivation/activation procedures	Wi-Fi: To disable Wi-Fi, press and hold "3" and volume down (about 5 seconds) on the button pad until the Wi-Fi indicator turns off. Within 2.5 hours the unit will enter low power standby. To reactivate Wi-Fi, press and hold "3" and volume down (about 5 seconds) until the Wi-Fi indicator is illuminated.	
SoundTouch® 30 Series III wireless music system	Power consumption in specified power mode, at 230V/50Hz input	0.4 W	Wi-Fi: 2.1 W Ethernet: 2.1 W Bluetooth®: N/A
	Time after which equipment is automatically switched into mode	≤ 2.5 hr	≤ 20 minutes
	Power consumption in networked standby with all wired network ports connected and all wireless network ports activated, at 230V/50Hz input	2.1 W	
	Wireless port deactivation/activation procedures	Wi-Fi: To disable Wi-Fi, press and hold "3" and volume down on the button pad until the Wi-Fi indicator turns off. Within 2.5 hours the unit will enter low power standby. To reactivate Wi-Fi, press and hold "3" and volume down until the Wi-Fi indicator is illuminated. Bluetooth®: Deactivate by clearing the pairing list by pressing and holding the Bluetooth® button on the unit until a confirmation message appears on the display. Activate by pairing with a Bluetooth® source.	
SoundTouch™ 30 series II Wi-Fi® music system	Power consumption in specified power mode, at 230V/50Hz input	0.4 W	Wi-Fi: 5.0 W Ethernet: 4.3 W
	Time after which equipment is automatically switched into mode	≤ 2.5 hr	≤ 20 minutes
	Power consumption in networked standby with all wired network ports connected and all wireless network ports activated, at 230V/50Hz input	4.3 W	
	Wireless port deactivation/activation procedures	Wi-Fi: To disable Wi-Fi, press and hold "3" and volume down (about 5 seconds) on the button pad until the Wi-Fi indicator turns off. Within 2.5 hours the unit will enter low power standby. To reactivate Wi-Fi, press and hold "3" and volume down (about 5 seconds) until the Wi-Fi indicator is illuminated.	

Accessories	Power State Information	Power Modes	
		Standby	Networked Standby
Bluetooth® audio adapter	Power consumption in specified power mode, at 230V/50Hz input	0.3 W	N/A
	Time after which equipment is automatically switched into mode	N/A	N/A
	Power consumption in networked standby with all wired network ports connected and all wireless network ports activated, at 230V/50Hz input	N/A	
	Wireless port deactivation/activation procedures	Bluetooth®: Deactivate by clearing the pairing list by pressing and holding the Bluetooth® button on the adapter (about 10 seconds). Activate by pairing with a Bluetooth® source.	